
GentleJet

# Automatic Liquid Soap Dispener


WaveJet

User Manual

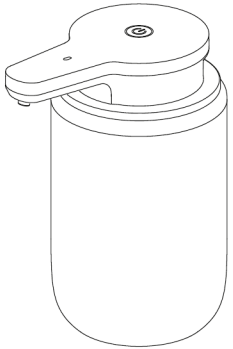


Please read this instruction carefully before using and keep it properly for further using.

## Product Presentation

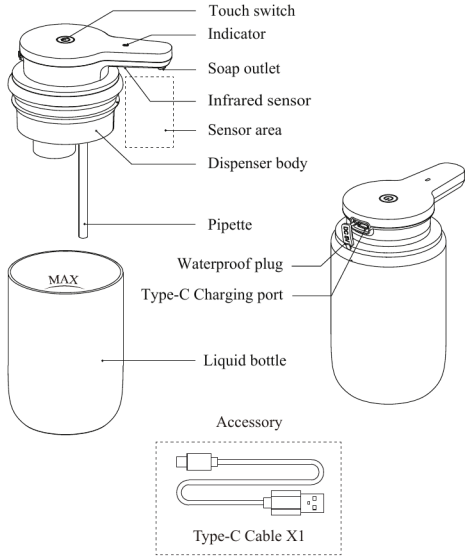



## Directions

①

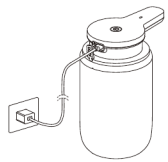


Charge with Type-C until the White light always on

②

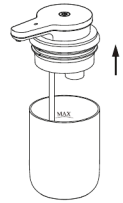



Take out the dispenser body

③

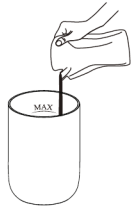


Pour soap hand sanitizer into the bottle, not exceed the max line

④

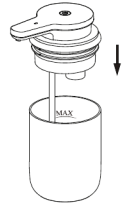


Aim the main part to bottle and screw downward until it is fixed

## Directions

⑤



Press and hold the touch switch for 2S on / off

⑥



Reach into the sensing area and take a proper amount of soap

⑦



Rub the soap to foam fully



Rinse hands with water

⑧



Automatic cleaning mode:
In the standby state, double click the button, the indicator blue light continuously flashes, soap is emitted continuously for 20s. Press the button if you need to stop cleaning in advance.

## Specifications

Product Name：Automatic Liquid Soap Dispener
Item No：WaveJet
Materials：ABS , SUS304 / SUS316
Size：115x80x159mm
N.W：About 436g (without hand sanitizer)
Working Temperature:5～40
Working Humidity:0～95%RH
Rated Voltage：DC 3.7V
Rated Current：0.65A
Rated Power：2.4W
Charging Voltage：DC 5V
Charging current：0.8A
Executive Standard：GB4706.1-2005、Q/JSSY 002-2022
Waterproof level：IPX5
Sensing Distance：0～5CM (Hand)
Single liquid output：1.0S(high)，0.5S(low)
Liquid Type: Hand sanitizer,detergent,shower gel,shampoo,disinfection gel and other stock liquids.
Capacity：300mL
Installation method: tabletop
Working life: ≥ 30000 times

## Indicator light indication

| | |
|---|---|
| On | White light on |
| Off | Red light flash 2times |
| High Grade | White light on |
| Low Grade | Green light on |
| Charging | Red light always on |
| Full charge | White light always on |
| Battery low | Red light on when bubbling |
| Auto-cleaning mode | Blue light keeps flashing |
| Induction area is blocked | the blue/green light flash 3mints alternately. |
| Low voltage automatic shutdown | Red light flash 5 times |

## Maintenance

1、When cleaning,please use a wet towel to gently wipe the surface of the machine in the shutdown state.

2、Recommended that the machine be used frequently to achieve the best state, and it is necessary to inducing at least once per month if not using for a long time.

3、Recommended to charge disapenser every 2-3 months to extend the battery life if it is not used for a long time.

4、Store the soap dispenser in a cool place away from direct sunlight or heat.

## Troubleshooting

| No | Fault Phenomenon | Fault Cause | Solutions |
|---|---|---|---|
| 1 | Unable to switch on | Batteries without power | Charge |
| 2 | Indication light doesn't shine | Not turned on the machine | Turn on it correctly |
| 3 | No liquid outflow | Run out of liquid | Add liquid |
| | | Machine fault | Contact us |
| 4 | the blue/green lights flash alternately | Countertop reflection | Put a black rubber pad under the machine. |
| | | Something blocking the sensor | wipe the sensor and restart |

## Cautions

1、Do not immerse the machine into water or rinse it directly with water to avoid short circuit.

2、Do not tilt or squeeze bottle and exceed the max line when pouring hand sanitizer. Keep the bottle clean before using.

3、It is strictly forbidden to use or add viscous liquids containing granules, powders, emulsions, etc. Avoiding machine failure. wiping

4、When there is liquid in the machine,do not put the machine down.

5、Do not block the bubble outlet with your hands or foreign objects.

6、When there is a foreign object on the sensor for 5 seconds,the blue/green lights flash alternately. At this time,shut down the machine,wipe the sensor or remove the occlusion and restart. The blue & green lights blink 3 mints alternately and will automatically shut down.

7、When the power is low, the red light will on after sensing, reminding to charge in time.

8、It is strictly prohibited to use a charger that does not match this machine for charging, otherwise it will cause the battery to fire or esplode.

9、There is no need to shut down when normal use, and it will automatically stand by when not working.

10、This machine is a touch button, the sensitivity of the button may be affected when there is water droplets on the button, pls wipe and clean it before operation.

11、If the machine will not be used for an extended period, you can add warm water and double-click the power button after turning it on to initiate a cleaning cycle. Then, pump out all the liquid to prevent it from drying up inside the pipelines and causing a clog.

12、Children should use it under adult supervision to avoid spraying liquid soap into eyes and ingestion.

## Warranty Description

The after-sales service of automatic soap dispenser is as follows:

1.Within 7 days from the day you signed for the product,the malfunction of the product listed in the malfunction table is determined by the after-sales service center,and you can enjoy free return or replacement service.

2.Within 8-15days from the next day of your signing,the malfunction of the product listed in the malfunction table is determined by the after-sales service center,and you can enjoy free replacement service.

3.Within 12 months from the next day of your signing,this product has a failure listed in the malfunction table is determined by the after-sales service center,and you can enjoy free maintenance.

| Malfunction Table | |
|---|---|
| Automatic Soap Dispenser | Unable to switch on/off |
| | Indicator light is not on |
| | No liquid outflowing |

## Non-warranty regulations

1.Unauthorized maintenance,misuse,collision,negligence,abuse,injection,alteration, incorrect use of non-product accessories, or tear, alter the label, anti-counterfeiting marks.

2.The three guarantees period has been exceeded.

3.Inconformity with the performance listed in the malfunction table.

4.Product and its accessories have the performance failure listed in malfunction table due to human factors.